
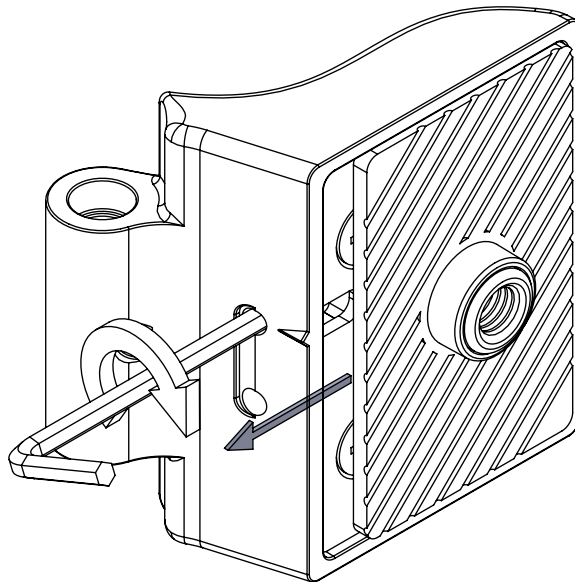


### Adjusting Forward

STEP to move center forward:

- 1) Turn "A" left/loosen as indicated by arrow.
- 2) Turn "B" left/loosen as indicated (moving center into position)
- 3) Turn "A" right/tighten (securing the position)

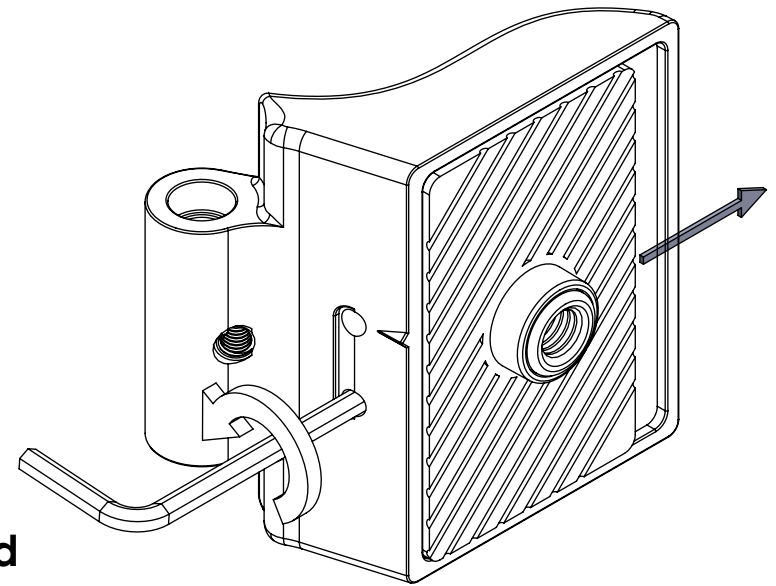

### Adjusting Backward

STEP to move center backward:

- 1) Turn "B" Right/tighten as indicated by arrow.
- 2) Turn "A" Right/tighten as indicated (moving center into position)
- 3) Turn "B" left/loosen (securing the position)