
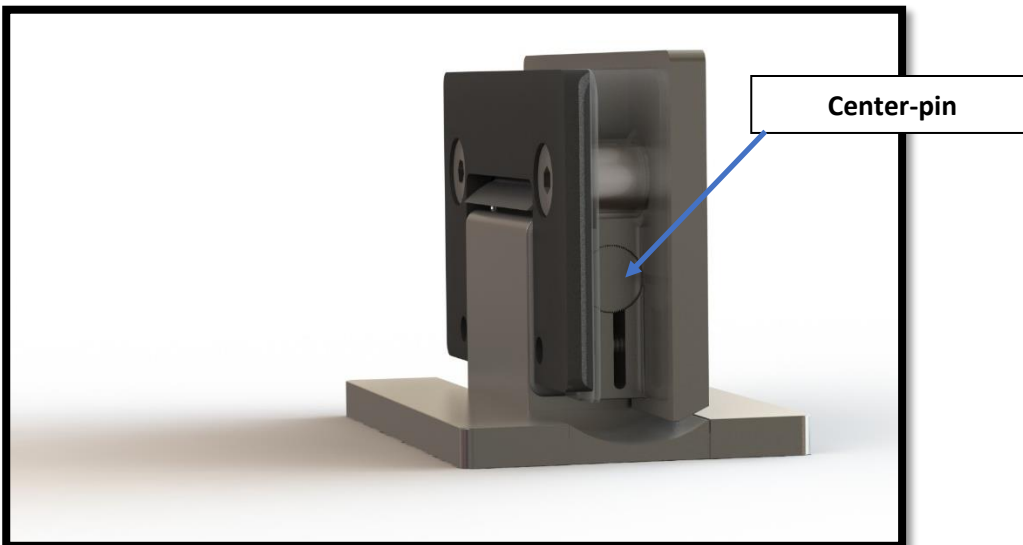


## Best practice and tips before installation:


- 1) Open/close the hinge and check the center-pin does not move with the hinge.
- 2) Make sure the 2 small positioning screws are loose. Tighten only after the door is installed.

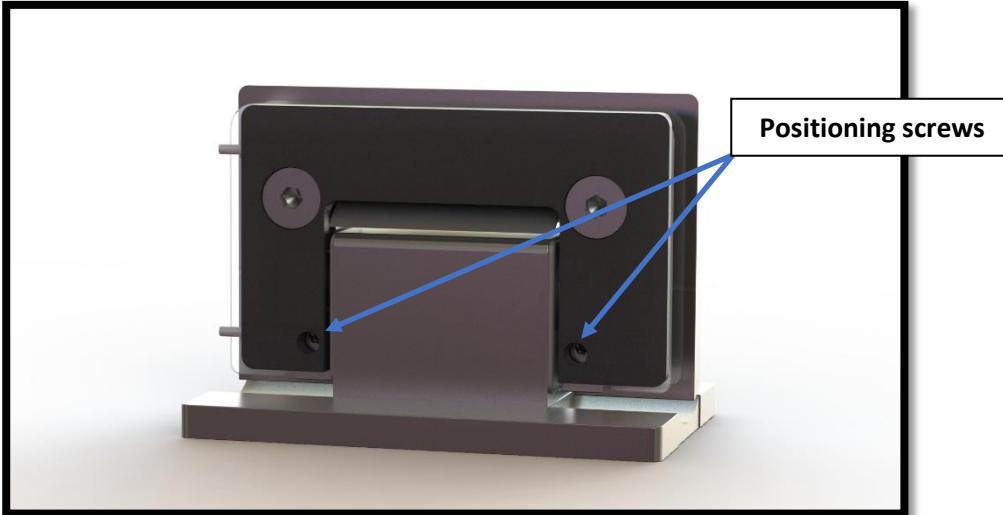

## Unable to find the desired 0° position

### Cause and solution:

Tightening the 2 small “zero-point adjustment screws” makes a strong and effective hold by deforming the hinge, -see below area:

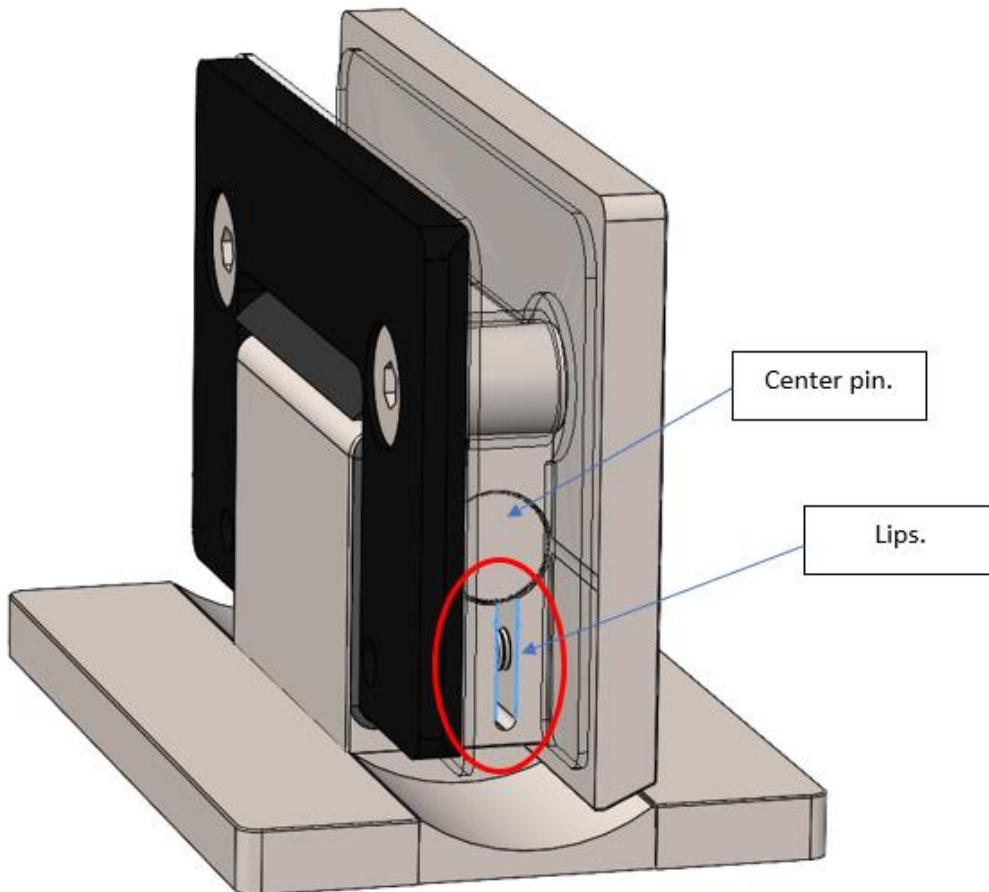

Normally, when loosening the small screws, these lip areas lose their grip and hold. But sometimes the areas keep the hold. This means the indicated area (on both sides of the hinge) needs to be spread apart for the center pin to rotate freely.

Easiest way to do this is to...

- 1) Take off the glass door.
- 2) Remove both small center hold screws.
- 3) Find a large flat screwdriver.
- 4) Insert the screwdriver between the lips of the shown area and turn it – thereby increasing the distance between the lips – both sides of the hinge.
- 5) To make sure all is ok... work the hinge (1 or 2 times) until the center pin stops turning.  
(Tip: Making a marker line on the pin helps to see if it moves)
- 6) Insert the 2 position hold screws loosely, -do not tighten.
- 7) Hinge is now ready.