


# Installation Instructions


1. Put the installation drawing on the door, approx 45mm between the door frame and center hole (Picture 1), then drill the hole.

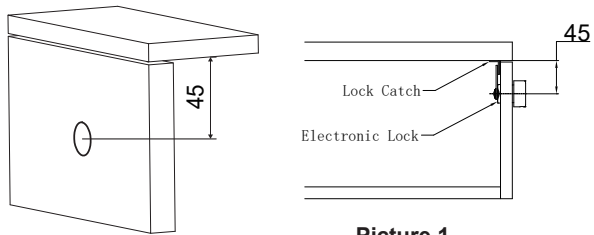



Picture 1

## 2. Mounting lock catch


1. Make positioning line 1 on the end face of the left plate corresponding to the central position of the lock tongue. The locking center coincides with positioning line 1 to determine the longitudinal position of the locking on the left door;
2. Then make positioning line 2 at 17.5mm (or 27.5mm) away from the end face of the left plate. The long side of the lock faces outward, and the outer surface of the long side coincides with the positioning line 2 to determine the transverse position of the lock; (See the positioning size diagram of lock box and lock)
3. Secure the lock using two cross pan head wood screws 3\*14.

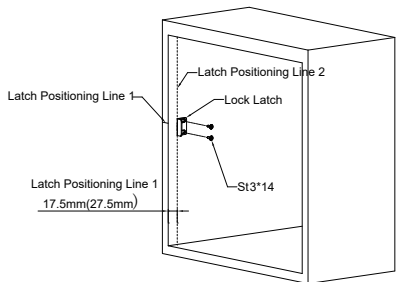

## INSTALLATION INSTRUCTION

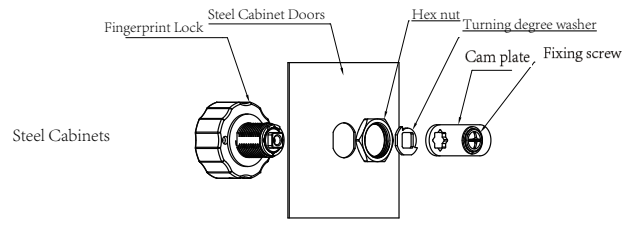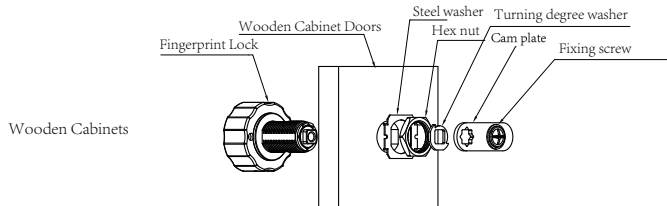

## INSTALLATION DRAWING

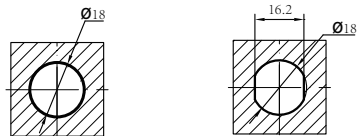

Wooden cabinet mounting hole size

Steel cabinet mounting hole size

## COMPONENT

